

Parker Texas Thermowell

Lowest cost, highest quality thermowells,
protection tubes and sample probes



What you need, when you need it.

With a wealth of thermowells, protection tubes, and sample probes in stock and ready to go, Parker Texas Thermowell really delivers. In fact, we offer same-day shipping on all our standard products. Need something special? We've got that, too. With the largest inventory of exotic alloys, Parker offers you more options and faster turnaround time. Plus we're one of the few suppliers that not only stocks Stellite – as well as other hard-to-find materials beyond stainless steel – but has the tooling in-house to cut it.



Contact Information: Thermowell Product Features:

Parker Hannifin Corporation
Instrumentation Products Division
Parker Thermowell
6575 Tram Road
Beaumont, TX 77713

phone 409 924 0300
fax 409 924 0301
ipdsales@parker.com

www.parker.com/ipdus

- Designed to protect temperature instruments from damage in process systems where pressure, velocity, or viscous, abrasive, and corrosive materials are present, individually or in combination
- Used in virtually all process industries, including refining/petrochemical, oil and gas, chemical, food and beverage, pharmaceutical, biomedical, cement, power generation, and nuclear
- Facilitate the removal of the temperature instrument for replacement, repair, or testing without affecting the process system
- Available in threaded, flanged, VanStone, socket weld, weld-in and sanitary styles



ENGINEERING YOUR SUCCESS.

More options. Faster response.

Thermowell, tube or probe out of service? We offer one-hour quotes and same-day shipping on all in-stock items. With over 25 years of experience in the specification, design, and manufacture of thermowells of any configuration, we consistently outperform our competition in customer satisfaction.


Thermowells protect temperature sensors in severe environments. For most industrial applications, our standard products provide the necessary strength if the material, style and length are correctly specified.

Protection tubes are a lower cost alternative. They're used where the process system is relatively benign or the dimensional requirements make a thermowell cost-prohibitive.


Sample probes capture a sample of a process stream. Probes are an in-line device and a component of a product analysis system.




A sampling of our thermowell configurations

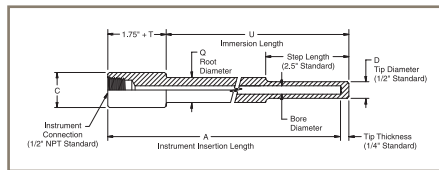


Socket Weld

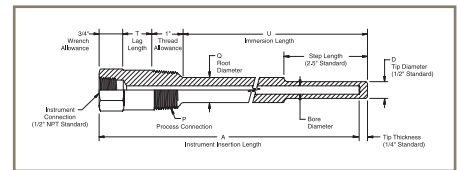


Threaded

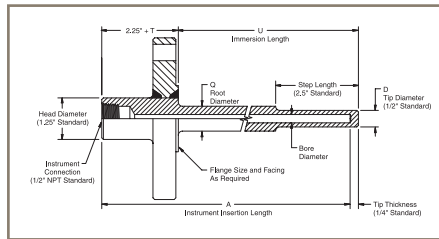

Flanged

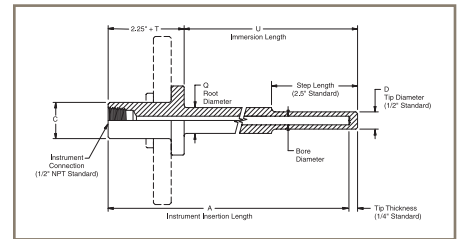

Van Stone

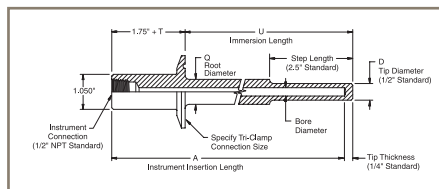

Sanitary

Materials of Construction	
Parker maintains an extensive inventory of bar stock, pipe, and flanges in various materials, including:	
316 SST	Carbon steel
304 SST	Hastelloy
310 SST	Monel
321 SST	Inconel
347 SST	Nickel
446 SST	Titanium
Stellite 6B (and several other metal grades)	

CUSTOM SHIPPING ON US

We're so confident we can meet your needs for custom thermowells, we'll pay for the shipping if your custom thermowell order (or that part of the total order) doesn't leave our facility on the promised ship date.

